


Thermo Scientific Orion Ferrite Kit for 2100 Series Analyzers

The ferrite kit is supplied with all Thermo Scientific Orion 2100 series analyzers and can be purchased separately using Cat. No. 2100FRK. The ferrite kit contains two ferrites.

Ferrite Installation

1. Open the ferrite using a flat tip screwdriver to lift the latch of the ferrite.
2. Feed the cable wires through the center of the ferrite and then loop the cable wires around the ferrite core and through the center of the ferrite again.
3. Place the ferrite at the bottom of the analyzer chassis, near its edge. Adjust the ferrite location on the cable so the ferrite is near the top of the cable.

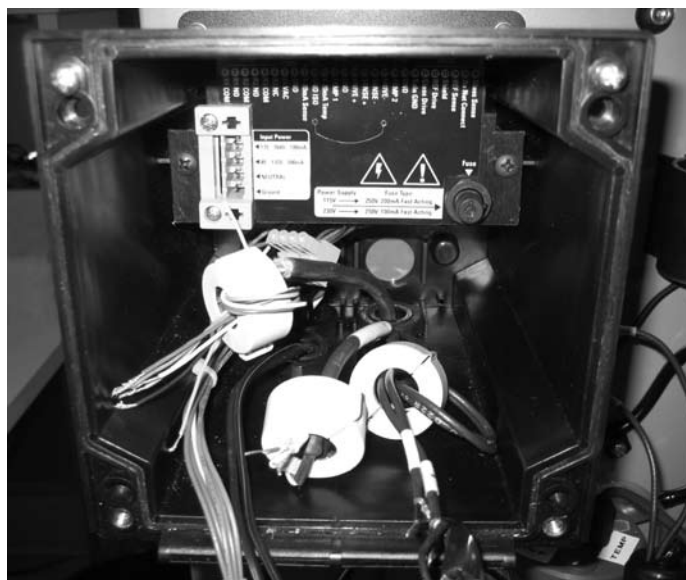

Ordering Information

Cat. No.	Description
2100FRK	Ferrite kit for 2100 series analyzers, includes two ferrites

©2009 Thermo Fisher Scientific Inc. All rights reserved. All trademarks are the property of Thermo Fisher Scientific Inc. and its subsidiaries.



Process Water Instruments

North America
 166 Cummings Center
 Beverly, MA 01915 USA
 Toll Free: 1-800-225-1480
 Tel: 1-978-232-6000
 Dom. Fax: 1-978-232-6015
 Int'l Fax: 978-232-6031

Europe
 P.O. Box 254, 3860 AG Nijkerk
 Wallerstraat 125K, 3862 CN
 Nijkerk, Netherlands
 Tel: (31) 033-2463887
 Fax: (31) 033-2460832

Asia Pacific
 B1K 55, Ayer Rajah Crescent
 #04-16/24, Singapore 139949
 Tel: 65-6778-6876
 Fax: 65-6773-0836

www.thermo.com/processwater

